


INSTRUCTIONS

1. SEPARATE PANELS

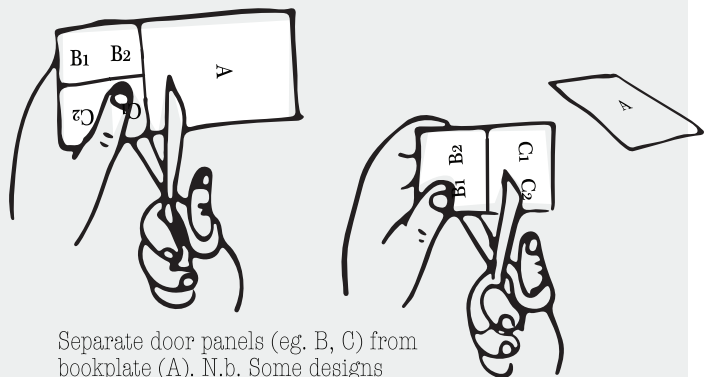


Separate door panels (eg. B, C) from bookplate (A). N.b. Some designs include only one door/flap component; refer to diagrams on website.

2. FOLD & DRYFIT

Fold door panels, ensuring the edges are aligned, and leaving a narrow edge of about 1/8"-3/16".

Dryfitting is recommended before proceeding with next steps.

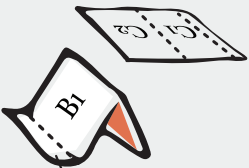

n.b. Narrow folded edge will serve as hinge joint.

3. ACTIVATE ADHESIVE



4. CREATE DOUBLE-SIDED DOOR(S)




Press down to set. You now have a finished door. (Repeat for door C if applicable).

5. HINGE JOINT



6. ALIGNMENT & ASSEMBLY

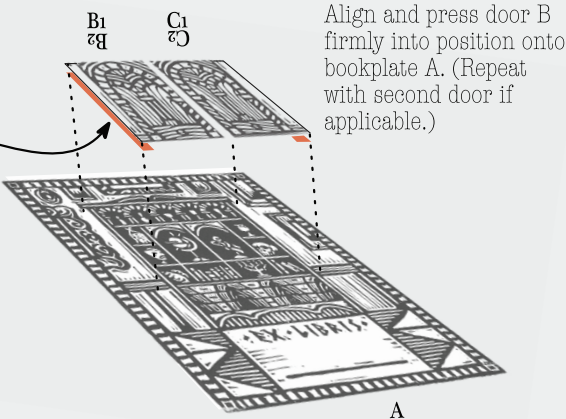

TIP: It is recommended to set and “close” door B after affixing it to bookplate to get best alignment for door C: align inside edge of door C to closed edge of door B before setting hinge joint edge of door C down to glue.